

EPSON Projector Board


Enable/Disable Touch

1. Press the **Menu** button on your EPSON Remote
2. Scroll down to the **Extended** tab and select **Easy Interactive Function**
3. Select **Touch Unit Setup** and then select **Power**
4. Click **Off** to turn the touch off and **On** to turn the touch on




1. Menu

2. Extended tab

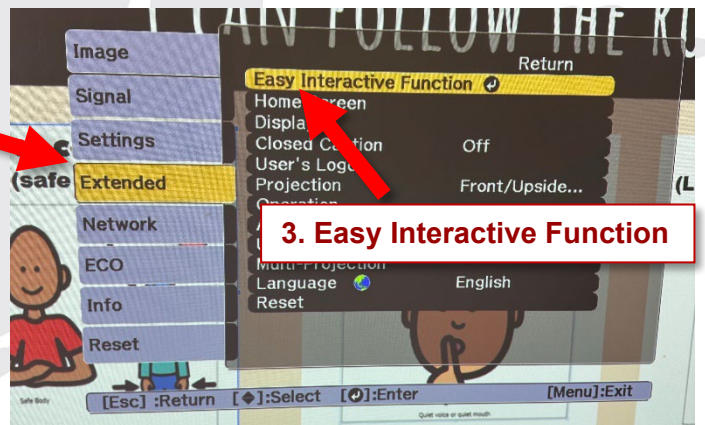


3. Easy Interactive Function

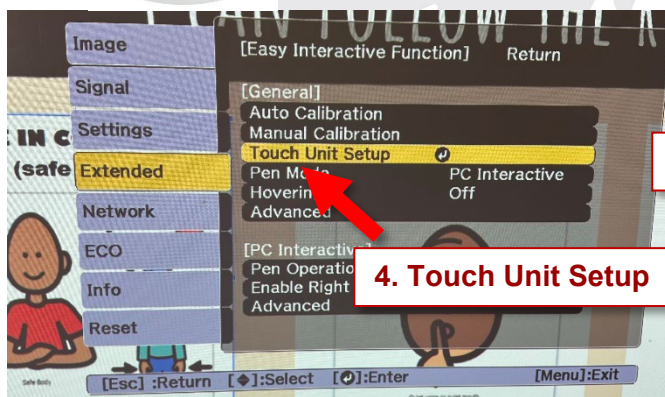


4. Touch Unit Setup

5. Power

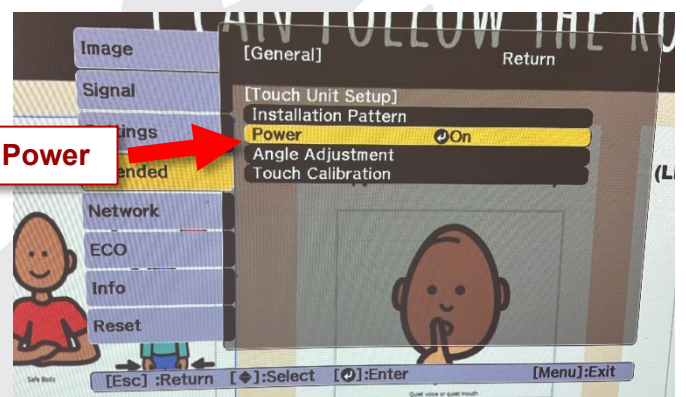

6. On (Touch On)

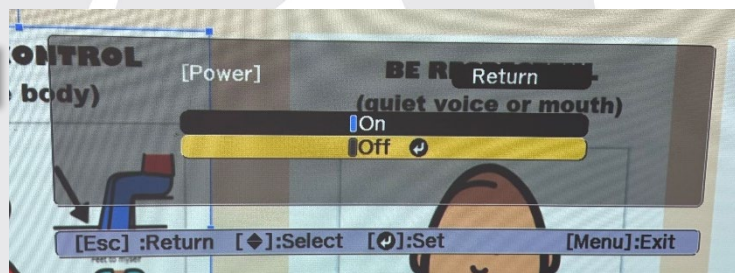

6. Off (Touch Off)